





Pabco Asphalt Shingle over waterproof roofing underlay on 15mm plywood on timber frame.

All Nogs must be provided by the main contractor as per this drawing, to allow for fixing of plywood.

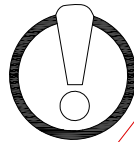

40mm clearance of Fly rafter from roof frame is required to install ASRNZ roofing system.

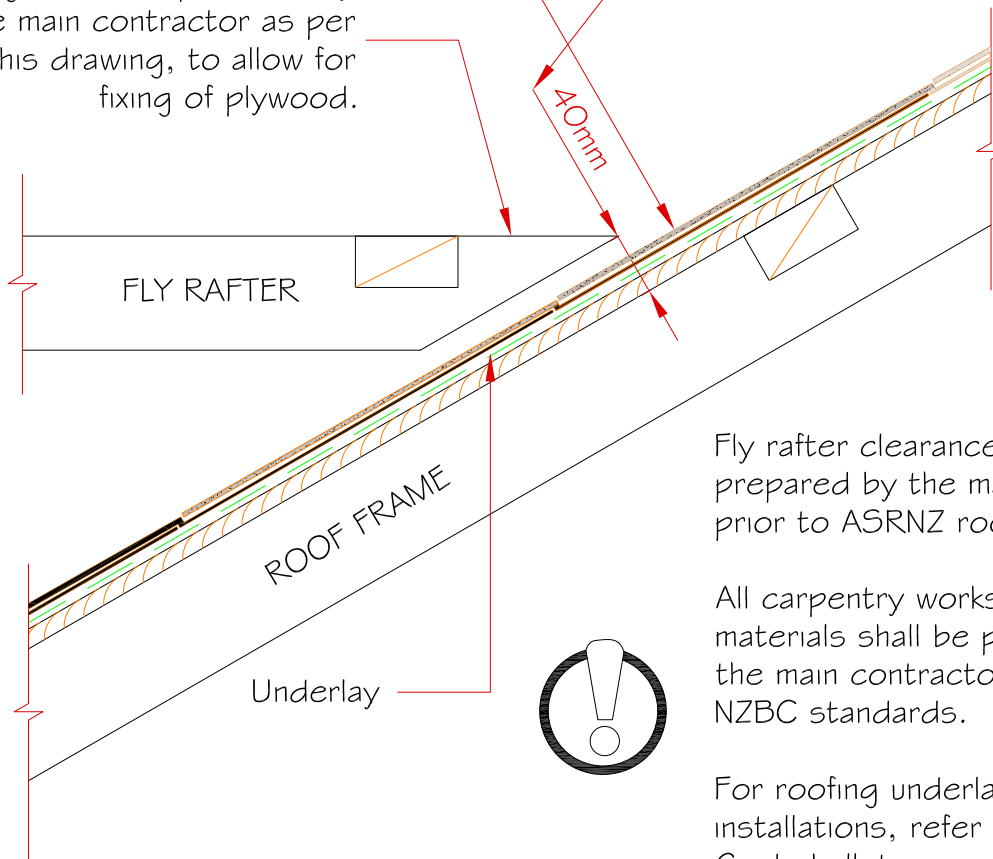

Fly rafter clearance must be prepared by the main contractor prior to ASRNZ roof installation.

All carpentry works and materials shall be provided by the main contractor, as per NZBC standards.

For roofing underlay & plywood installations, refer to Installation Guide bulletin.

File Name:
2.90 - Fly Rafter Junction Detail.dwg

Scale:
NTS

Drawn By:
I.M

Date:
28th January 2013

Drawing Name:
Fly Rafter & Pitched Roof Intersection Detail

Sheet:
17



Ph: 09 636 7051 | Fax: 09 636 7053 | Free Ph: 0800 261 116 | e-mail: info@asphaltshingle.co.nz
www.asphaltshingle.co.nz | PO Box 24 676, Royal Oak, Auckland, New Zealand

- * All constructions are to comply with New Zealand Building Standards and Territorial Authority Regulations.
- * The contractor shall verify all dimensions and levels on site before commencing work.
- * These drawings are not to be used for construction without Territorial Authority Consent.
- * Do not attempt to reproduce these drawings in any unlawful manner without the consent of Asphalt Shingle Roofing NZ.
- * These drawings may be utilised in order to create working drawings for submission to a Territorial Authority or certifier for consent purposes.